

Attention:

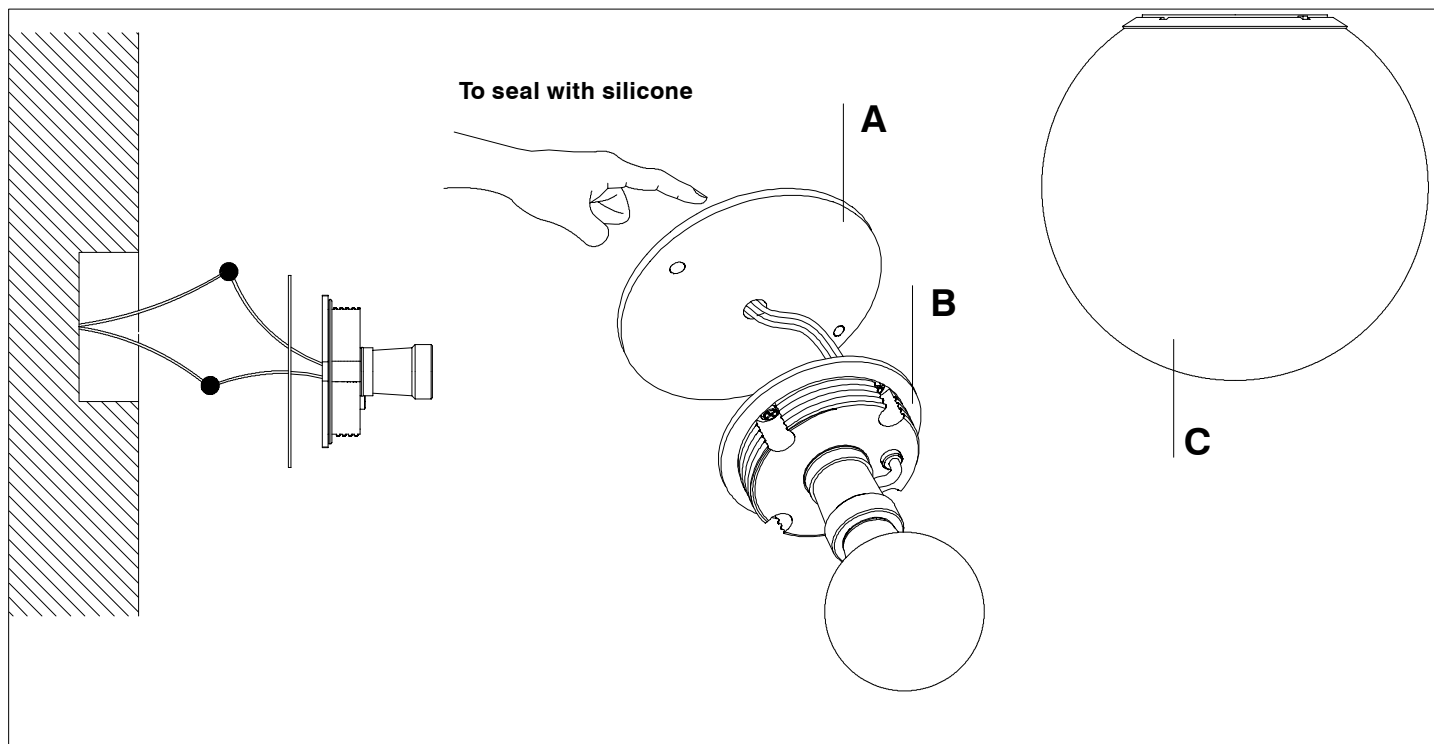
Employer exclusivement les ampoules du type et de la puissance indiquée sur la plaque de l'appareil.

Déconnecter la tension de réseau avant toute opération sur l'appareil.

Attention:

Only use bulbs of the type and wattage indicated on the rating plate.

Prior to any work on the fixture always switch off the mains.

**Instructions de Montage**

Brancher les câbles en connectant le câble blanc de l'appareil au câble blanc de la boîte à mur et le câble noir de l'appareil au câble noir. Fixer la tournette **A** à la boîte murale en la scellant avec de la silicone. Fixer le culot **B** à la tournette **A**. Insérer l'ampoule. Serrer le diffuseur **C** au culot **B**.

Assembly Instructions

Make electrical connections by connecting the white wire from the fixture to the white wire from the wall box and the fixture black wire to the black wire. Place the plate **A** on the wall-mounted box and seal it with some silicon. Anchor the base **B** to the plate **A**. Install the bulb. Tighten the diffuser **C** to the base **B**.

Ampoule:

DIOSCURI 25 1x max100W TYPE G E26 Ø 95 mm

DIOSCURI 35/42 1x max 100W TYPE G E26 Ø 95mm

1xmax 150W TYPE A19 E26

Bulb:

DIOSCURI 25 1x max100W TYPE G E26 Ø 95 mm

DIOSCURI 35/42 1x max 100W TYPE GE26 Ø 95mm

1xmax 150W TYPE A19 E26

Artemide se réserve d'apporter dans n'importe quel moment toute modification technique et structurelle qu'on trouve nécessaire pour l'amélioration du produit.
Artemide reserves the right to introduce all the technical and structural changes required for the improvement of the product.

Attention: La sécurité de l'appareil n'est garantie que si les instructions sont convenablement suivies. Il est donc nécessaire de les conserver.

Attention: This equipment is guaranteed only when used as indicated in these instructions. Therefore they should be kept for future reference.

En cas de réclamation, veuillez citer le numéro
In case of complaint, please quote number



mod.B

cod. Y503000567

Artemide®

via Bergamo, 18 - 20010 Pregnana Milanese (Milano) - ITALIA.
tel: 93.51.81 - (a ricerca automatica)
indirizzo telegrafico Artemide Pregnana
telex 332507 Artemi I - telefax 02/93.59.02.54 - 93.59.04.96
codice fiscale e partita I.V.A. 00846890150